



07 3265 4663

2/452 Bilsen Rd, Geebung QLD 4034

sales@powermobility.com.au

powermobility.com.au

# Threshold Access Ramp

## Threshold Access Ramp

- Retrofit Solution
- Reduce Tripping Hazards
- Slip Resistant Recycled Rubber
- Quick and Easy Installation
- Lower Cost than Cement or Metal Plate
- Meets Access & Mobility Gradient 1:8 (in path of access and egress)
- Maintenance Free

When a doorway has a rise height above 35mm maximum, the TR050 becomes a user determined solution. A deemed-to-satisfy compliance if required should be sought from a building engineer or access consultant.



### Safety & Convenience at:


- Home
- Work
- Aged Care Facilities
- Retirement Villages
- Apartments
- Hotels, Motels & Shops

**A portable aid for delivery drivers!**

### How to Install



Clean area of dirt and dust before installation.

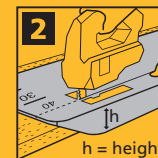

If required trim Threshold Ramp with a Jig-saw using a coarse wood cutting blade. Cut along height indicators provided. **Tip:** Adjust speed of Jig-saw for a smooth cut.



Simply lay in place or fix permanently with builders adhesive.

Raven Products Pty Ltd  
18-22 Aldershot Road  
Lonsdale SA 5160  
Australia  
www.raven.com.au



Available in two convenient sizes (mm)

**MODEL TR025**

1010 (L) x 200 (W) x 25 (H)

**MODEL TR050**

1140 (L) x 400 (W) x 50 (H)

**\*MODEL TR050 DISPLAYED**